

Operating Instructions

Note:

1. Advanced settings can only be changed by qualified professionals with relevant certifications.
2. Check requirements with local NSP before activating 10% AC output boost.
3. Only **STS 5KTL** has the option to enable/disable the 10% AC output boost.
4. The default password to enter the advanced settings is 1111, applicable to all on-grid inverters.

Please follow this flow chart to enable 10% AC output boost:

